

MULTI-FUNCTIONAL STROLLER INTSTALLATION AND USE MANUAL

NAME OF COMMODITY:

MULTI-FUNCTIONAL BABY STROLLER

- ★ SHOCK ABSORPTION SYSTEM MAKE BABY MORE COMFORTABLE.
- ★ BACKREST CAN BE ADJUSTED FREELY FOR SITTING OR SLEEPING.
- ★ REVERSIBLE SEAT UNIT TO LET BABY FACE TO MOM AND SEE THE WORLD MORE.
- ★ LARGE BASKET BRING MORE CONVENIENCE WHEN OUT WITH BABY.



EUROPEAN STANDARD: EN1888-1:2018

IMPORTANT: PLEASE READ THE MANUAL BEFORE USE AND KEEP IT FOR FUTURE REFERENCE. ALL PICTURE IN THIS MANUAL ARE FOR REFERENCE ONLY, SPECIFICATIONS ARE SUBJECTED TO THE PRODUCTS YOU GET.

How to open the frame



1-1



1-2



1-3

1. After taking out the frame from the carton, release the lock on the left side of the rear leg when you face the baby stroller as pic 1-1, pull the handle upwards to open the frame as pic 1-2. Please make sure the second lock on the right side of the frame when you face the baby stroller is workable as pic 1-3 when the child is in the pram body. Or the frame may fold when the second lock is not workable.

Rear wheels installation



2-1

Rear wheels disassembly



2-2

2. Insert the pin of rear wheel into the hole of connecting plastic as pic. 2-1. Press the steel sheet of connecting plastic and the other hand take out the wheel as pic. 2-2.

Front wheels installation



3-1

Front wheels disassembly



3-2

3. Insert the pin of front wheels into the hole of plastic connector as pic.3-1, and try to pull it out to test if it assembles well.

Press the steel sheet of plastic connector and the other hand take out the wheel as pic. 3-2

Carry cot installation



4

Front Armrest Installation




5

4. Insert the socket of carry cot into the hole of plastic connector on both sides as pic.4

Press the round button of carry cot two sides and take out the canopy.


5. Insert the socket of front armrest into the hole of plastic connector on both sides as pic. 5.

Canopy installation

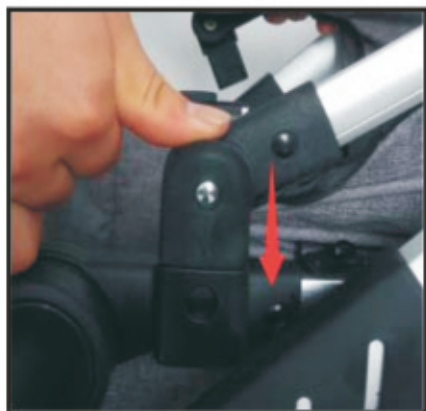

6

Canopy disassembly

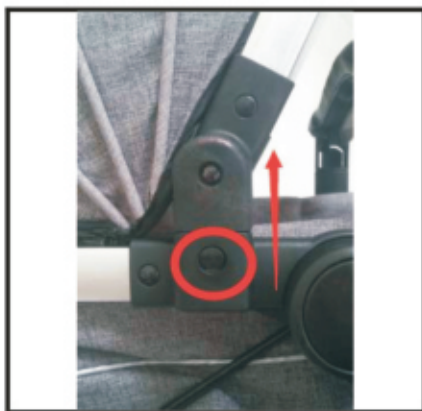

7

6. Insert the socket of canopy into the hole of plastic connector on both sides as pic. 6

7. Press the round button of the hole and pull out the socket of canopy, then take out the other sides with same steps as pic. 7.

How to reverse the carry cot



8



9

8. Press the round button and pull out carry cot on both sides as pic 8. Then change the carry cot into opposite direction and install it as pic 9 .

How to adjust the carry cot into seat



10



11



12



13

9. Hold the plastic part on the pram body (as pic 10) and make it up to adjust the pram body to be seat position. Fasten the two sets buckles of foot rest (as pic 11), press the buckle of back rest and pull out the belt (as pic 12) to adjust the backrest position from sleeping to seat unit.

10. Press the buckle of the basket rest and pull or release the belt can adjust position for the pram body (as pic 12 and 13).

How to use the brake



14



15

11. Step on the button of brake downward to fix the stroller as pic. 14. Raise the button to release the brake as pic. 15.

How to adjust the height of handle bar



16

17

18

12. Hold the handle bar with the folding button and push the handle bar as pic 16 can make the handle higher, and push the handle as pic 17 can make the handle lower. Hold the folding button to make the steel square inside and release the button, move the handle when there is sound with "KA", the height adjustment is done. There are 5 different heights can be adjusted (see pic 18), repeat the operation can change the different height for the handle bar.

NOTE: Better to brake the baby stroller when you want to adjust the handle bar height.

How to folding the stroller?



19

20

21

22

13. Adjust pram body to be seat unit as pic 19, press the second lock, hold the fold button on the handle bar and pull it as pic 20 with a little power till there is sound of 'KA', the frame folding is done with the lock button is in position as pic 21. The right folding situation is shown as pic 22.

How to hide the restraint system



21-1



21-2

14. Put the mattress into the sleeping basket to cover the harness system(see picture 21-1 and 21-2), so that the sleeping basket can be used for child under 6 months.

HOW TO FIX THE CAR SEAT WITH THE BABY STROLLER FRAME



22-1



22-2



23



24

15. Press the red button as pic 22-1 and insert the adapter with letter L to bottom of left handle(when you face the car seat),the other one into right side, then insert both adapters to frame holder till there is sound of "KA"(see pic 23) the car seat is fixed correctly with the frame. Press the round button marked in red and pull the adapters on both sides(as pic 24) can take the car seat out.

- 1、 Suitable Age: 0-36months
- 2、 Maximum load for pram body: 15KGS.
- 3、 How to use safe belt.:



- Insert both buckles into the hole as above picture.
- Press the red button to open the safe belt.
- Press the button on both side can adjust the safe belt.

Warning

KEEP AWAY FROM THE FIRE

1. European standard: EN1888-1:2018.
2. This pram body is suitable for one child from 0-36 months, and the maximum weight is 15kg.
3. This pram body is suitable for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees.
Maximum weight of the child: 9 kg
4. WARNING! Never leave your child unattended.
5. WARNING! Do not let your child play with this product.
6. Any load attached to the handle and/or on the back of backrest and/or on the sides of the stroller will affect vehicle stability.
7. Thickness for adding mattress must be less than 25mm.
8. Maximum load for the basket is 3 kg.
9. Maximum load for the pocket is 100g
10. Parking device shall be engaged when placing and removing the children.
11. WARNING! Ensure that all the locking devices are correctly engaged before use.
12. WARNING! Check the frame body or seat unit or car seat attachment are correctly engaged before use.